Ritter®

Installation Instructions for Upholstery Kit

Subject: Upholstery Installation / Removal
Applicable Models: 311, 319, 75 evolution

Installation

I. HEADREST PILLOW (FIG. 1, A)
Orient table into chair position. Align pillow mount on headrest cushion with pivot mount of table, press parts fully together and secure by latching three (3) retaining latches.

II. UPHOLSTERED BACK CUSHION (FIG. 1, B)
Orient table with back in horizontal, flat table position. Place back cushion onto table's back weldment with hinge cover toward foot of table. Align one (1) mounting stud, on underside of cushion, to locking slot in back weldment and allow stud to drop into slot. Next, slide cushion toward foot of table until retaining studs drop into holes, make sure that hinge cover lays over hinge. Secure back cushion by latching two (2) retaining latches located in paper roll holder.

III. UPHOLSTERED SEAT CUSHION (FIG. 1, C)
Place seat cushion on table's seat weldment, noting orientation of seat cushion, (ref. fig. 1, C). Align two (2) mounting studs, on underside of cushion, to locking slots in seat weldment and allow studs to drop into slots. Next, slide cushion toward head of table until retaining studs drop into holes. Secure seat cushion by latching two (2) retaining latches under seat near foot end of table.

IV. UPHOLSTERED LEG CUSHION (FIG. 1, D)
Orient table with foot extension in full up, horizontal position. Align two (2) retaining studs, on underside of leg cushion with holes in foot extension, noting orientation of leg cushion, (ref. fig. 1, D). Secure leg cushion by latching two (2) retaining latches under foot extension.

V. UPHOLSTERED FOOTREST CUSHION (FIG. 1, E)
Place footrest cushion upside-down on smooth clean work surface. Remove footboard assembly from table by actuating release levers and sliding horizontally away from table. Install footboard weldment onto footrest cushion as shown in fig. 1, E. Secure weldment to cushion by latching three (3) retaining latches. Install footrest cushion assembly on table by placing assembly on foot extension, align metal guides with slots and insert until you hear the mechanical locking device engage.

VI. COLOR SIDE PANEL INSERTS (FIG. 1, F)
Orient color panel insert with longest length side to side. Align and insert left end of color insert (approx. $\frac{3}{16}$") into left side of plastic side panel on table. Hold panel firmly and bow panel outward at it's middle, align right end of panel to right side of plastic side panel and insert. Once the ends of the color panel are installed, slide panel side to side to achieve proper fit.

Removal

I. UPHOLSTERED TOP (HEADREST BACK, SEAT, LEG, & FOOT CUSHIONS)
Locate installation instruction listed above for corresponding cushion and reverse instructions to remove upholstered cushion.

II. COLOR SIDE PANEL INSERTS (FIG. 1, F)
Locate panel access hole in bottom of plastic side panel. Push outward on color insert, using your index finger as illustrated in (Fig. 1, F), until bottom edge of panel can be grasped by your other hand. Then pull panel outward, while holding bottom edge, until panel "POPS" from table.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark 1994

Printed in U.S.A.

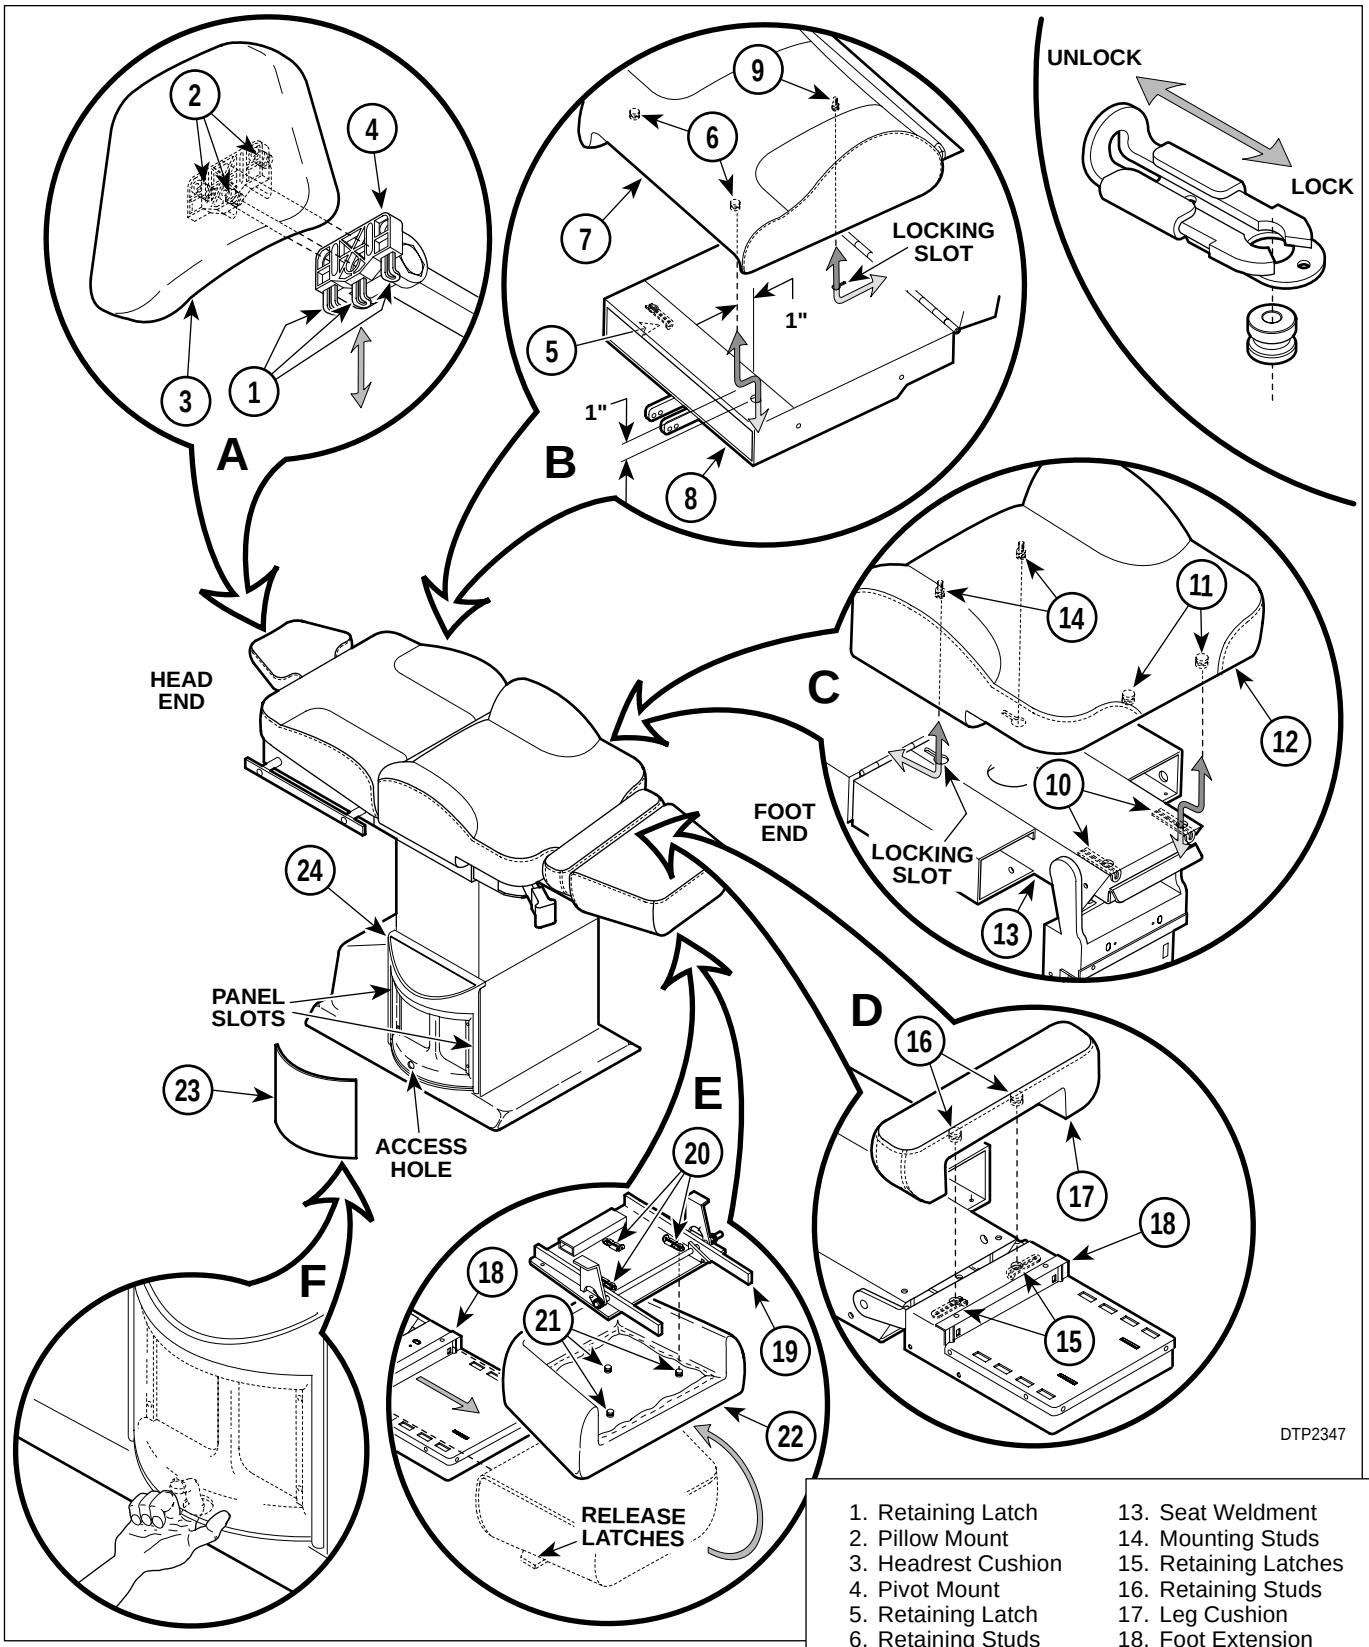

1. Retaining Latch
2. Pillow Mount
3. Headrest Cushion
4. Pivot Mount
5. Retaining Latch
6. Retaining Studs
7. Back Cushion
8. Back Weldment
9. Mounting Stud
10. Retaining Latch
11. Retaining Stud
12. Seat Cushion
13. Seat Weldment
14. Mounting Studs
15. Retaining Latches
16. Retaining Studs
17. Leg Cushion
18. Foot Extension
19. Foot Board Weldment
20. Retaining Latch
21. Retaining Studs
22. Footrest Cushion
23. Side Panel
24. Color Panel Insert

FIGURE 1

© Midmark 1994

Printed in U.S.A.